




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK SPLIT REAR EXHAUST
CHEVY S10/SONOMA TRUCK 4.3L 2WD
EXTENDED CAB, SHORT BED
PART #5536

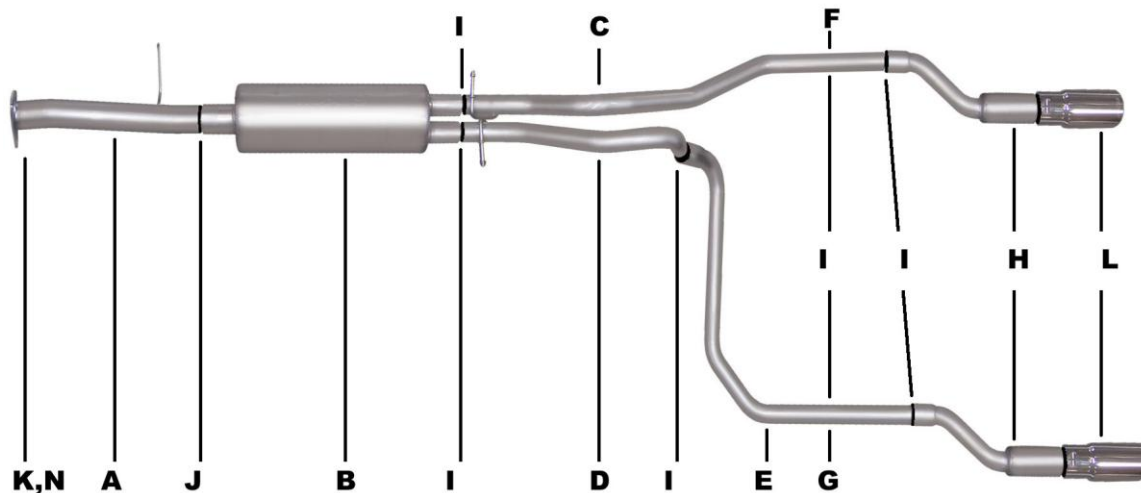

ITEM	PART #	QUANTITY	DESCRIPTION
A	700323	1	2 1/2" HEADPIPE WITH FLANGE #GP-101
B	758216	1	SUPERFLOW MUFFLER-DUAL OUTLET
C	70025-1	1	1-3/4" PASSENGER OVERAXLE TAILPIPE
D	70026-1	1	1-3/4" FRONT DRIVER SIDE TAILPIPE
E	70026-A	1	1-3/4" OVERAXLE DRIVER SIDE TAILPIPE
F	4120	1	TAILPIPE HANGER (PASSENGERSIDE)
G	4121	1	TAILPIPE HANGER (DRIVERSIDE)
H	70018	2	1-3/4" EXIT PIPE
I	5755	7	1-3/4" CLAMP
J	5757	1	2-1/2" CLAMP
K	9684	1	HEADPIPE GASKET
L	500361	2	3" STAINLESS TIPS
M	ZIP	2	ZIP TIES
N	BOLT KIT FOR HEADPIPE FLANGE:		
	3270	3	3/8" X 2" BOLT
	9535	6	3/8" WASHER
	2724	3	3/8" LOCK NUT

WILL NOT WORK WITH REAR SWAY BAR

Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 pm.

INSTALLATION INSTRUCTIONS

PART #5536

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES. **DO NOT WORK ON HOT PIPES!** DO NOT DAMAGE FACTORY HEADPIPE GASKET YOU WILL NEED TO RE-USE!!

SUGGESTED TOOLS:

15MM SOCKET, 9/16" SOCKET & WRENCH, JACK STAND, WD-40. HACKSAW


LAY OUT THE GIBSON EXHAUST ON THE FLOOR AND COMPARE PART NUMBERS WITH THE MANUAL.



UNBOLT STOCK HEADPIPE AT THE 3 BOLT FLANGE DIRECTLY BEHIND THE CATALYTIC CONVERTER. CUT STOCK TAILPIPE OFF RIGHT BEHIND THE STOCK MUFFLER. LEAVE ALL FACTORY RUBBER GROMMETS IN PLACE. SPRAY WD-40 ON ALL RUBBER GROMMETS FOR EASY REMOVAL.



INSTALL PASSENGER SIDE TAILPIPE # C INTO THE MUFFLER 1-1/2" TO 2". ATTACH IT TO THE MUFFLER USING CLAMP # I. INSERT WELDED HANGER INTO RUBBER GROMMET AND USE CLAMP # I TO HOLD TAILPIPE TO HANGER # F. DO NOT TIGHTEN

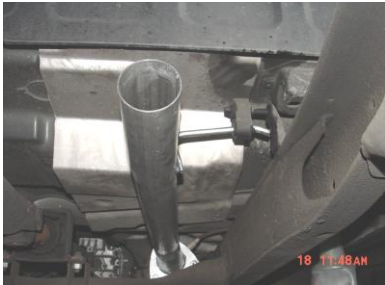

INSTALL HEADPIPE # A USING BOLT KIT # N & #K GASKET. INSERT WELDED HANGER INTO RUBBER GROMMET AND ATTACH TO STOCK FLANGE. DO NOT TIGHTEN.




INSTALL DRIVERS SIDE FRONT TAILPIPE # D INTO MUFFLER 1-1/2" TO 2". USE CLAMP # I AND ATTACH IT TO THE MUFFLER. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2" USING CLAMP # J. MAKE SURE OUTLETS ARE LEVEL. USE A JACKSTAND TO SUPPORT MUFFLER. DO NOT TIGHTEN.



INSTALL DRIVERS SIDE OVERAXLE PIPE # E ONTO FRONT TAILPIPE USING CLAMP #I. USE CLAMP # I TO HOLD TAILPIPE UP TO REAR HANGER # G. DO NOT TIGHTEN. USE ZIP TIES FOR BRAKE LINES.

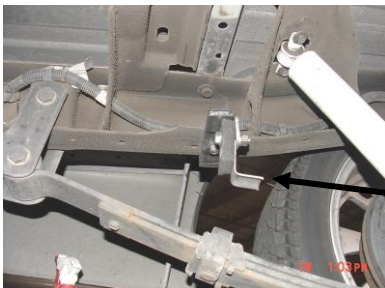

INSTALL HANGER # F ON THE PASSENGER TAILPIPE AND HANGER # G ON DRIVERSIDE TAILPIPE. MEASURE 19" FROM REAR OF FRAME AND BOLT INTO THE EXISTING ROUND HOLES (ABOUT 7/8") LOCATED ON THE FRAME ON BOTH SIDES OF THE VEHICLE.



INSTALL EXIT PIPES # H ONTO OVERAXLE TAILPIPES USING CLAMP # I. ADJUST FOR YOUR PREFERENCE. NEXT ROTATE PIPES FOR BEST CLEARANCE AND ALIGN TO FRAME RAIL. TIGHTEN ALL CLAMPS AND BOLTS STARTING FROM THE HEADPIPE AND WORK BACK. INSTALL STAINLESS TIPS.

"MAKE SURE YOU HAVE A 1" CLEARANCE FROM ALL RUBBER BRAKE LINES, FUEL LINES, SHOCK BOOTS, TIRES, ETC..."