




# INSTRUCTION MANUAL

## CAT-BACK SINGLE EXHAUST

### FORD VAN E350 6.8L-V10

## PART # 319895

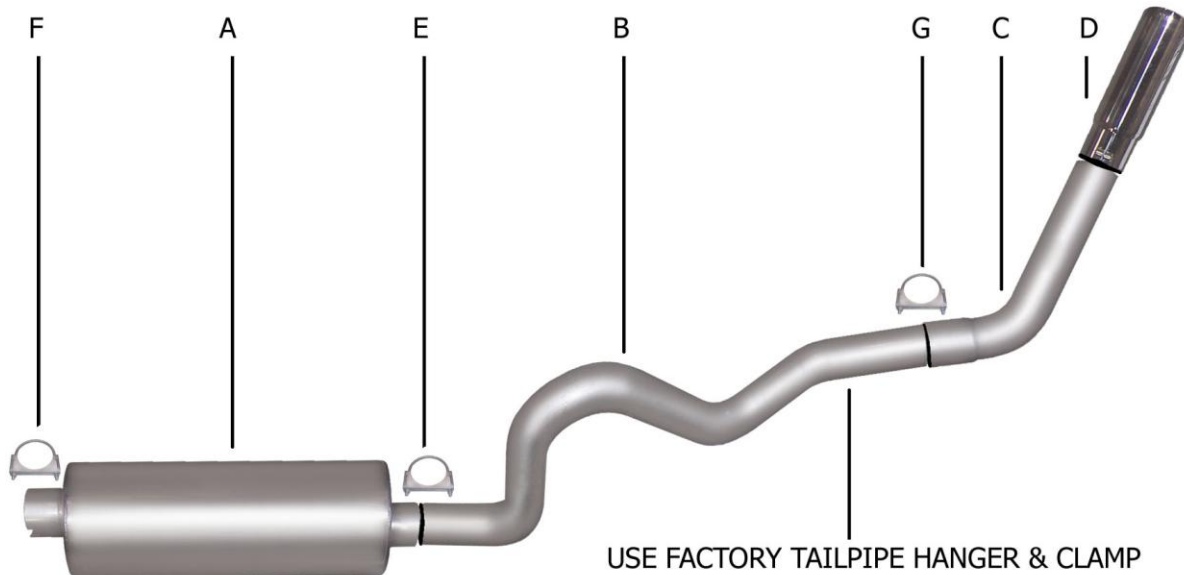

| ITEM | PART #   | QUANTITY | DESCRIPTION           |
|------|----------|----------|-----------------------|
| A    | 788824-C | 1        | SUPERFLOW MUFFLER     |
| B    | 70008    | 1        | 3" OVERAXLE TAILPIPE  |
| C    | 50032R-6 | 1        | 3" TURNOUT PIPE       |
| D    | 500360   | 1        | 3-1/2" STAINLESS TIP  |
| E    | 4114     | 1        | REAR MUFFLER T-HANGER |
| F    | 4115     | 1        | FRONT MUFLER HANGER   |
| G    | OHD300   | 1        | 3" CLAMP              |

*Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 AM to 5:00 PM.*

# INSTALLATION INSTRUCTIONS

**WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, ALONG WITH SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!**

1. Unbolt stock exhaust from behind the catalytic converter.
2. Lay out the GIBSON EXHAUST SYSTEM on the floor so it looks like the drawing.
3. Install muffler # A onto the converter and attach with hanger # F. Install rear muffler hanger # E to outlet of muffler. Muffler inlet is looking into the louvers.
4. Install the over axle tailpipe # B into outlet of muffler and attach with hanger # E.
5. Slide turnout pipe on the tailpipe behind the rear tire. Roll tailpipe until you have it at the correct angle for your truck and connect with clamp # G.
6. Install stainless steel tip. Clamp down. To clean stainless tip use a scotch brite pad and any stainless steel or aluminum cleaner.
7. When you have everything in place, tighten all bolts and clamp down.

**MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC.**