




INSTRUCTION MANUAL
CAT-BACK EXTREME DUAL EXHAUST
CHEVY/GMC 2500HD/3500 TRUCK 6.6L DURAMAX DIESEL
CREW CAB / SHORT BED
PART #5566

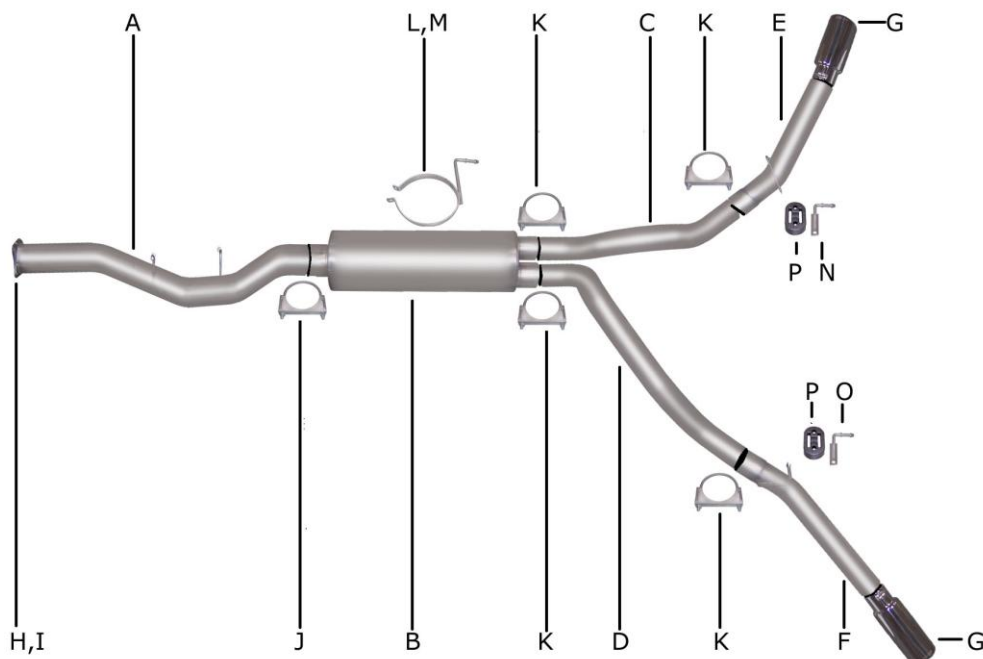

ITEM	PART #	QTY.	DESCRIPTION
A	700704	1	4.00" Head-Pipe w/ Flange GP-533 & Welded Hanger
B	758400	1	SuperFlow Muffler
C	700705	1	3.00" Pass. Over-axle Pipe
D	700706	1	3.00" Driver Over-axle Pipe
E	700707	1	3.00" Exit-pipe w/ welded hanger
F	700708	1	3.00" Exit-pipe w/ welded hanger
G	500379	2	4.00" Stainless Tip
H	BO-1038	1	Bolt Kit for Down-pipe
I	9252	1	Gasket for Down-pipe Flange
J	4171	1	4.00" Clamp
K	OHD300	4	3.00" Clamp
L	4247	1	Band Clamp w/ Weld Hanger
M	BO-1015	1	Bolt Kit for Band Clamp
N	4248	1	Pass. Rear Tailpipe hanger
O	4249	1	Driver Rear Tailpipe hanger
P	4240	2	Rear hanger Rubber Grommets

WILL NOT FIT WITH FUEL TANK MOUNTED IN THE REAR CENTER FRAME

WILL NOT FIT WITH 5TH WHEEL TRAILER HITCH

THANK YOU FOR PURCHASING OUR GIBSON EXHAUST SYSTEM FOR YOUR VEHICLE. IF YOU NEED FURTHER ASSISTANCE, PLEASE DO NOT HESITATE TO CALL OUR TECHNICAL DEPT. AT (800) 528-3044, MONDAY THROUGH FRIDAY, 8:00 AM TO 5:00 PM.

INSTALLATION INSTRUCTIONS

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET THE PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!!!

SUGGESTED TOOLS:

17MM SOCKET & WRENCH, 9/16", 1/2" SOCKET & WRENCH, JACKSTAND, WD-40, HACKSAW
LAY OUT THE EXHAUST AND COMPARE PART NUMBERS WITH THE DRAWING.



TO INSTALL YOUR GIBSON CAT-BACK YOU NEED TO REMOVE YOUR STOCK EXHAUST FROM THE CAT BACK. REMOVE IT FROM THE 4 BOLT FLANGE IN FRONT OF YOUR STOCK MUFFLER. CUT OFF YOUR STOCK TAILPIPE FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGER MOUNTS.



NEXT ON THE PASSENGERSIDE & DRIVERSIDE, REMOVE THE HITCH BOLT CLOSEST TO THE FRONT OF THE VEHICLE AND INSTALL REAR TAILPIPE HANGERS #N & O W/ RUBBER GROMMETS #P. LEAVE SNUG UNTIL EXIT PIPES ARE INSTALLED.



BOLT HEADPIPE #A ONTO FACTORY 4-BOLT FLANGE USING SUPPLIED BOLT KIT #H AND GASKET #I. BEFORE YOU INSTALL MUFFLER INSTALL BAND CLAMP HANGER #L

INSTALL MUFFLER #B 1 1/2" - 2" ONTO PIPE #A. USE CLAMP #K TO SECURE MUFFLER TO PIPE. **DO NOT TIGHTEN.** MAKE SURE MUFFLER OUTLETS ARE LEVEL.



INSTALL PASSENGERSIDE EXIT PIPE #E ONTO TAILPIPE USING CLAMP #L TO SECURE TOGETHER. **DO NOT TIGHTEN.** INSERT WELDED HANGER INTO RUBBER GROMMET, ROTATE IT TO THE BEST FIT FOR YOUR VEHICLE.



INSTALL PASS. SIDE OVER-AXLE PIPE #C INTO MUFFLER OUTLET 1 1/2"-2". USE CLAMP #K TO SECURE PIPE TO MUFFLER OUTLET. **DO NOT TIGHTEN**



INSTALL DRIVERSIDE EXIT PIPE #F ONTO TAILPIPE. USE CLAMP #K TO SECURE TOGETHER. **DO NOT TIGHTEN.** INSERT WELDED HANGER INTO RUBBER GROMMET ROTATE TO THE BEST FIT FOR YOUR VEHICLE.



INSTALL DRIVERSIDE OVERAXLEPIPE #D INTO MUFFLER 1 1/2"-2". USE CLAMP #K TO SECURE PIPE TO MUFFLER OUTLET. **DO NOT TIGHTEN**



INSTALL YOUR STAINLESS STEEL TIPS TO YOUR DESIRED LOOK AND CLAMP DOWN. WHEN EVERYTHING IS IN PLACE, FIRMLY TIGHTEN DOWN ALL THE BOLTS AND CLAMPS SECURELY STARTING FROM THE FRONT AND WORKING YOUR WAY BACK. TO CLEAN YOUR STAINLESS STEEL TIPS USE A GOOD QUALITY STAINLESS CLEANER.

"MAKE SURE YOU HAVE A MINIMUM OF 1" CLEARANCE ON ALL PIPES FROM RUBBER BRAKE LINES, FUEL LINES, TIRES, SHOCKS, ETC..."