




INSTALLATION INSTRUCTIONS

Metal Mulisha Stainless Steel Exhaust
Chevrolet Silverado 2500HD 6.0L Crew Cab, Standard Bed
Double Cab, Long Bed
PART #60-0028

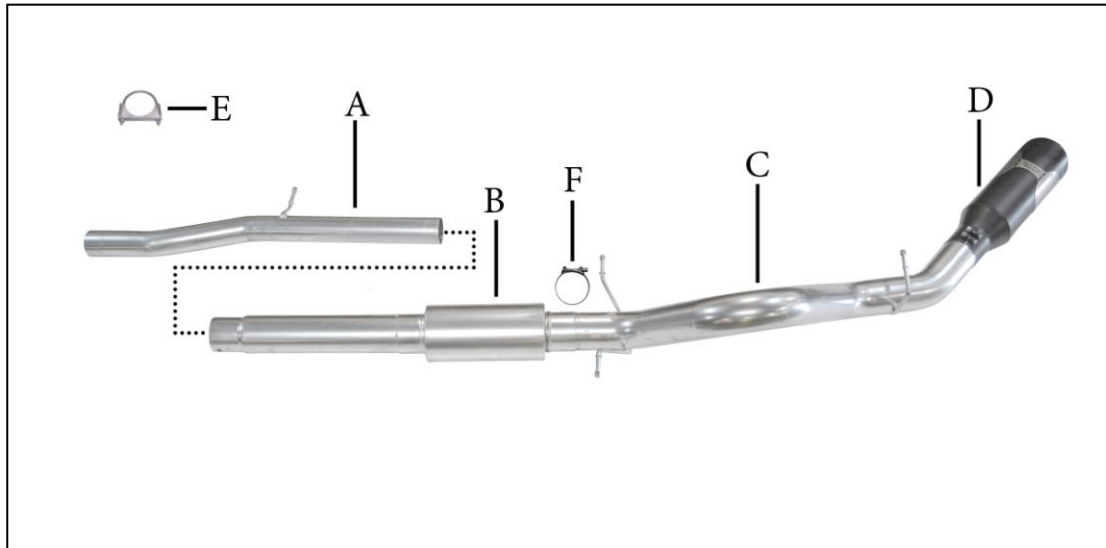

ITEM	PART #	QTY	DESCRIPTION
A	999700830S	1	3.5" Stainless Headpipe w/ Welded Hanger
B	MM057	1	Stainless Muffler Assembly
C	MM058	1	4.0" Stainless Tailpipe w/ Welded Hangers
D	61-1036-B	1	6" Metal Mulisha Exhaust Tip
E	4170	1	3.5" Clamp
F	5759	1	4" Band Clamp

Note: This exhaust will exceed some state sound laws and requirements. Aggressive driving will get you noticed and can result in a ticket or warning from your local law enforcement agency.

Thank you for purchasing our Gibson Exhaust system for your vehicle.
If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044
Monday through Friday, 8:00 am to 5:00 pm

EXHAUST INSTALLATION

PART# 60-0028

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES.

DO NOT WORK WITH HOT PIPES!!!

1. Disconnect the negative battery cable before removal of the OEM Exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. Remove the factory exhaust by cutting behind the factory muffler. Once the tail pipe has been removed un-bolt the muffler and head pipe at the flange located behind the catalytic converter. Use wd-40 or another type of penetrating oil to remove the rubber grommets. Do not damage these they will be re used.

NOTE: Crew Cab Standard Bed Models will need to cut 5.5" off the head pipe item A on the non flanged side



2. Install Head pipe# A onto the factory flange. You will re use the factory nuts at this connection. Loosely tighten down the flange.



3. Install muffler assembly Item # B onto the head pipe. You may need to use a jack stand to support the muffler while installing the tailpipe. Use Item# E to clamp the muffler assembly to the head pipe. Loosely tighten down. Insert hanger into rubber grommets.



4. Install over axle pipe Item # C into the muffler outlet. Slip the hangers into the rubber grommets and keep tailpipe loose. Use clamp #F to secure tailpipe to the muffler.



5. With everything loose you may need to adjust the system for proper clearance of shocks, brake lines, ect.



6. With proper clearance from spare tire install the exhaust tip onto the tailpipe. The system was designed to have the tip 1" below the quarter panel of the vehicle. With the tip in your desired position begin to tighten down all clamp connections from the front head pipe back.



7. Be sure to check all clearance after each section has been tightened to be sure there is proper clearance. It may take 4-500 miles for your vehicle to fully adjust to the changes in exhaust flow.

"MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC..." TORQUE ALL CLAMPS TO APPROX. 100 TO 150 FT LBS.