




INSTRUCTION MANUAL
CAT-BACK STAINLESS SINGLE EXHAUST
NISSAN PATHFINDER 3.0L 4WD 2DR
PART# 612200

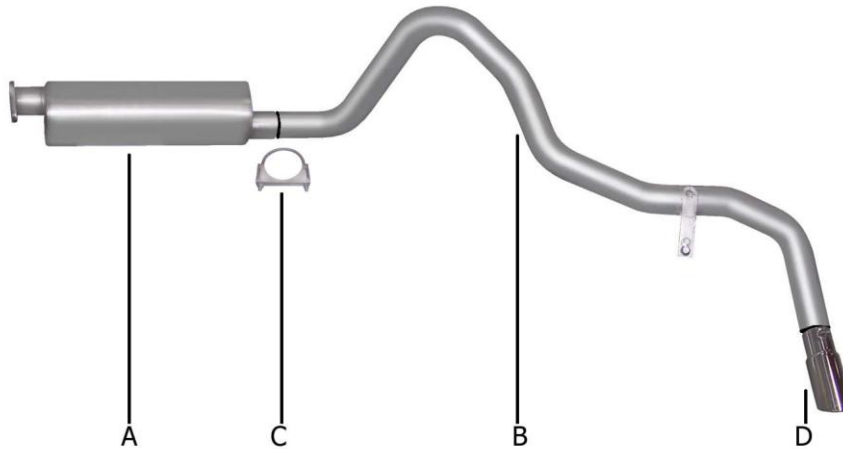

ITEM	PART#	QUANTITY	DESCRIPTION
A	788200S-2	1	SUPERFLOW SS MUFFLER W/FLANGE #GP-102
B	356-700134S	1	2 ½" STAINLESS OVERAXLE TAILPIPE
C	4130	1	O.E HANGER
D	500361	1	3" STAINLESS TIP
E	BOLT KIT FOR FLANGE		
	9537	2	3/8" STAR WASHER
	9535	2	3/8" WASHER
	5057	2	3/8-16 NUT
	3304	2	3/8-16 X 1-1/2 BOLT

EXHAUST EXITS ON DRIVERS SIDE

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday-Friday, 8:00 to 5:00pm.

EXHAUST INSTALLATION

93 NISSAN PATHFINDER 4WD

#612200

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES.

- 1. LAY OUT THE GIBSON EXHAUST SYSTEM ON THE FLOOR SO IT LOOKS LIKE THE DRAWING. (NOTE: DRAWING IS NOT EXACT BUT FOR PLACEMENT OF PARTS ONLY.)**
- 2. REMOVE STOCK EXHAUST BEHIND CATALYTIC CONVERTER. UNBOLT HANGERS, CUT OFF TAILPIPE USING A SAWZALL.**
- 3. BOLT ON MUFFLER WITH WELD ON FLANGE, (IF STOCK BOLTS BREAK ON REMOVAL, YOU WILL NEED TO REPLACE WITH BOLTS GIBSON PROVIDES.)**
- 4. INSTALL TAILPIPE AND SLIP IN BACK OF MUFFLER (YOU MAY NEED TO LIFT REAR END OF TRUCK USING A BOTTLE JACK TO MAKE INSTALLING THE TAILPIPE EASIER.)**
- 5. INSTALL REAR HANGER AND TIGHTEN ONLY AFTER EVERYTHING IS IN THE RIGHT LOCATION.**
- 6. SLIP STAINLESS STEEL TIP ON AND TIGHTEN.**

SPECIAL NOTES

***MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, CHOCK BOOTS, TIRES, ETC.**