




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK STAINLESS SINGLE EXHAUST
DODGE RAM 2500 TRUCK 5.9L DIESEL 2/4WD
EXTENDED CAB, SHORT & LONG BED

PART # 616573

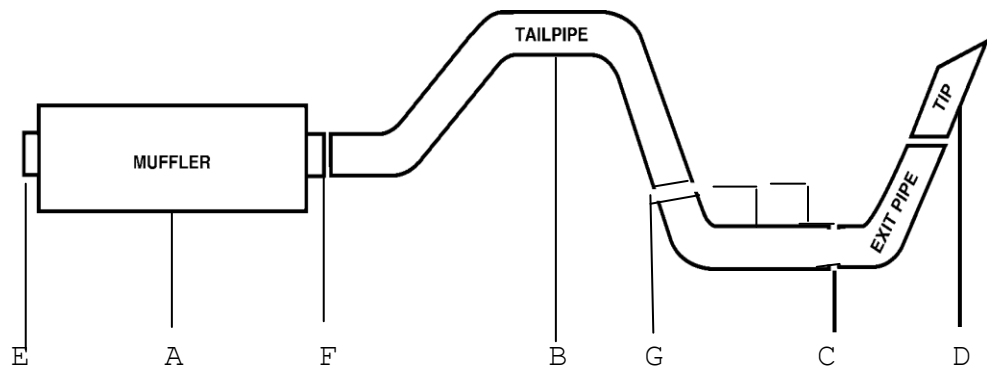

ITEM	PART #	QUANTITY	DESCRIPTION
A	788040S-A	1	4" SS SUPERFLOW MUFFLER
B	592-700465S	1	4" SS OVER-AXLE TAILPIPE
C	593-700466S	1	4" SS EXIT PIPE WITH WELDED HANGERS
D	500401	1	5" STAINLESS TIP
E	4206	1	FRONT MUFFLER HANGER
F	4207	1	REAR MUFFLER HANGER
G	4171	1	4" CLAMP

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need any further assistance, please do not hesitate to call our Technical Department at 0-800-528-3044 Monday through Friday, 8:00 AM to 5:00 PM

EXHAUST INSTALLATION #616573

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:


1/2" , 9/16", 15mm Socket & Wrench, WD-40, Jack Stand, Hacksaw



Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. To remove the stock exhaust remove it just in front of the stock muffler. You may need to heat it up for easier removal. Leave all rubber grommets in place. Use WD-40 to aid in removal of exhaust and hangers.



Install the over axle tailpipe # B into the muffler 1-1/2" to 2". Secure to the muffler using clamp # F. Do not tighten. Insert hanger into rubber grommet.

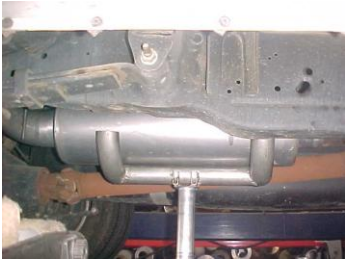

Install muffler # A on to your existing stock front pipe and secure with clamp # E. Make sure to line up the notch. Insert welded hanger into rubber grommet. Do not tighten. Muffler inlet is looking into the louvers.



Install the turnout pipe # C on to the tailpipe. Insert welded hanger into rubber grommet. Secure together with clamp # G . Do not tighten. Roll the exit pipe until it is at the correct angle for your truck.



Insert welded hangers into the rubber grommet. Do not tighten.



Install stainless steel tip. Clamp down. When you have everything in place, firmly tighten all bolts and clamp down securely. To clean stainless steel tip use any stainless steel cleaner and Scotch Brite pad.

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC..