




INSTRUCTION MANUAL
CAT BACK STAINLESS DEEGAN 38 DUAL SPORT EXHAUST
SILVERADO, SIERRA TRUCK 2500HD/35006.0L, 8.1L, 2/4WD
EXTENDED CAB-LONGBED,
CREWCAB-SHORTBED & LONGBED
PART # 65204D

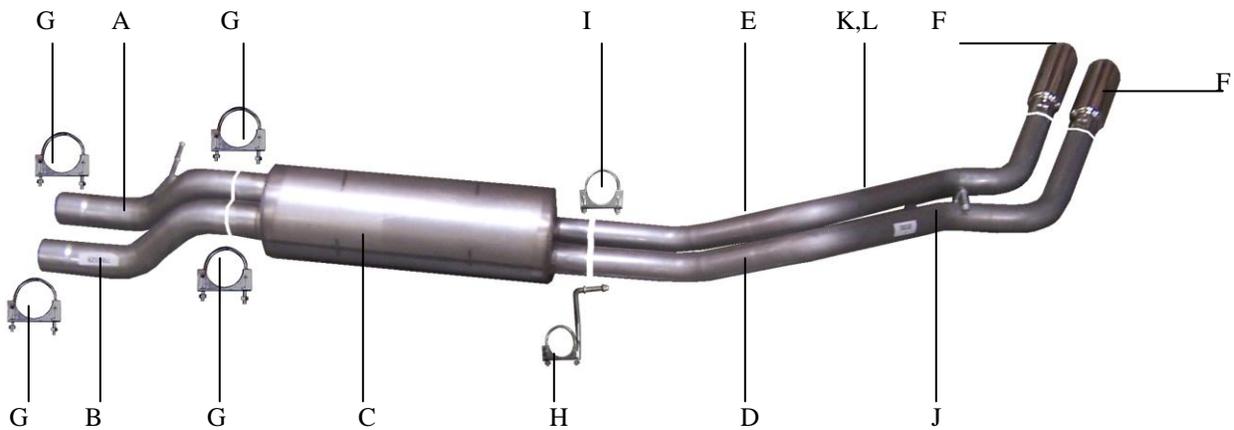

ITEM	PART #	QUANTITY	DESCRIPTION
A	493-700328S	1	3" STAINLESSPSGR. HEADPIPE W/WELDED HANGER
B	494-700329S	1	3" STAINLESS DRIVER SIDE HEADPIPE
C	766300S	1	SUPERFLOW STAINLESS MUFFLER
D	495-700330S	1	2-1/2" STAINLESS DRIVERSIDE TAILPIPE W/HANGER
E	496-700331S	1	2-1/2" STAINLESS PASSENGER TAILPIPE
F	500640-B	2	4" BLACK SS TIP
G	OHD300	4	3" CLAMPS
H	4159	1	2-1/2" HANGER FOR MUFFLER
I	5757	1	2-1/2" CLAMP
J	BO-906	1	BOLT KIT FOR TAILPIPE
K	4204	1	SPARE TIRE BRACKET
L	S-103	1	SPARE TIRE BRACKET TAB
M	DE-13	2	DEEGAN 38 BADGE

THANK YOU FOR CHOOSING OUR GIBSON PERFORMANCE EXHAUST FOR YOUR VEHICLE. IF YOU NEED FURTHER ASSISTANCE, PLEASE DO NOT HESITATE TO CALL OUR TECHNICAL DEPARTMENT AT (800) 528-3044, MONDAY THROUGH FRIDAY, 8:00 AM TO 5:00 PM.
 54X20X12

EXHAUST INSTALLATION #65204D

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES.
DO NOT WORK WITH HOT PIPES!!!

SUGGESTED TOOLS

9/16", 1/2" SOCKET & WRENCH, JACK STANDS, WD-40, HACKSAW OR SAWZALL

LAY OUT THE EXHAUST AND COMPARE PART NUMBERS WITH THE DRAWING



TO REMOVE STOCK EXHAUST, CUT 13" FROM THE FRONT OF THE MUFFLER, MEASURE TOWARDS THE FRONT OF THE VEHICLE. LEAVE ALL RUBBER GROMMETS ON THE HANGERS. USE WD-40 TO AID IN THE REMOVAL OF EXHAUST AND HANGERS. SUPPORT THE CATALYTIC CONVERTER BEFORE CUTTING.



SLIDE DRIVERS SIDE TAILPIPE #D INTO MUFFLER 1-1/2" TO 2". INSERT WELDED HANGER INTO RUBBER GROMMET.



SLIDE PASSENGER SIDE HEADPIPE #A ONTO STOCK HEADPIPE. INSERT WELDED HANGER INTO RUBBER GROMMET. NEXT INSTALL DRIVERS SIDE HEADPIPE #B ONTO STOCK HEADPIPE, USE CLAMP #G TO SECURE BOTH HEADPIPES, DO NOT TIGHTEN.



INSTALL HANGER #H INTO RUBBER GROMMET JUST ABOVE DRIVERS SIDE OUTLET OF MUFFLER. YOU WILL USE THIS CLAMP TO SECURE TAILPIPE TO MUFFLER, DO NOT TIGHTEN.



SLIDE MUFFLER #C ONTO HEADPIPES 1-1/2" TO 2". OUTLETS SHOULD BE AT THE BOTTOM. USE A JACK STAND TO SUPPORT MUFFLER.



USE BOLT KIT #J TO SECURE TAILPIPES TOGETHER. THE PASSENGER SIDE TAILPIPE WILL BE ON THE BOTTOM.



INSTALL SPARE TIRE BRACKET #K ONTO HOLE IN FRAME LOCATED ABOVE TAILPIPE HANGER. HOLE IS ABOUT 1" ROUND.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.



SLIDE PASSENGER SIDE TAILPIPE #E INTO MUFFLER 1-1/2" TO 2". USE CLAMP #I TO SECURE TAILPIPE TO MUFFLER. DO NOT TIGHTEN.

MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE AWAY FROM ALL RUBBER BRAKE LINES, TIRES, SHOCKS, FUEL LINES, ETC.