




Installation Instructions

Cat-Back Stainless DEEGAN 38 Dual Sport Exhaust
 Chevy Silverado / GMC Sierra 1500 Truck
 Crew Cab, Short Bed, 4.8L-5.3L-6.0L 2/4wd
 Extended Cab, Standard Bed, 4.8L-5.3L 2/4wd

*** Designed specifically for vehicles equipped with Active Fuel Management ***

Part #65626D

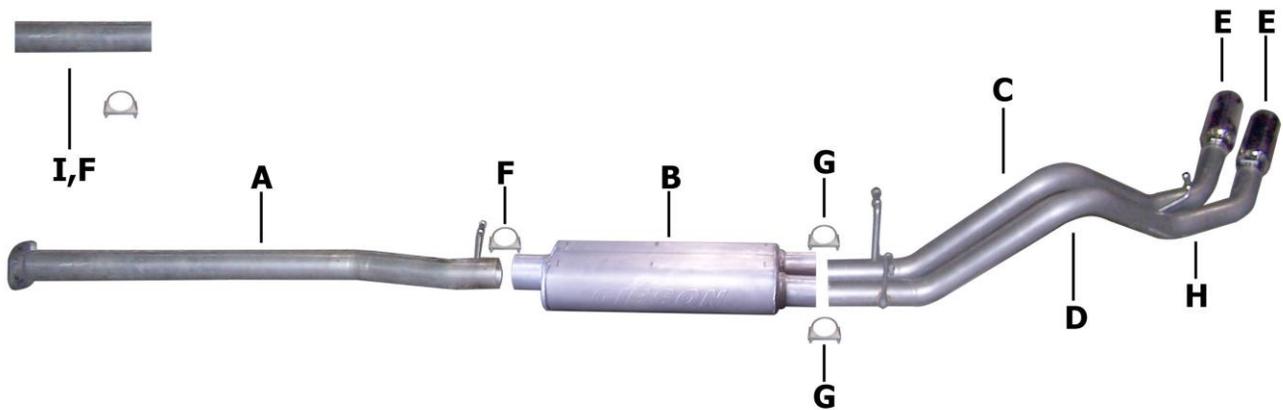

| ITEM | PART | QUANTITY | DESCRIPTION |
|------|--------------|----------|---|
| A | 1135-700895S | 1 | 3" Stainless Headpipe with welded Flange |
| B | 11235S | 1 | Stainless Superflow CFT Muffler |
| C | 1227-700984S | 1 | 2.25" Stainless Passenger Side Over Axle Tailpipe |
| D | 1228-700985S | 1 | 2.25" Stainless Driver Side Over Axle Tailpipe |
| E | 500639-B | 2 | 4" BLACK SS TIP |
| F | OHD300 | 2 | 3" Clamp |
| G | 5756 | 2 | 2.25" Clamp |
| H | BO-906 | 1 | Bolt kit for Tailpipe |
| I | 1323-701092S | 1 | Stainless Adapter (2009 Models Only) |
| J | DE-13 | 2 | DEEGAN 38 BADGE |

Thank you for purchasing our Gibson Exhaust System for your vehicle.
 If you need further assistance, please do not hesitate to call our technical department at
 (800) 528 -3044 Monday through Friday, 8am to 5 pm.

54X20X12

Installation Instructions #65626D

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove stock exhaust, unbolt it at the flange behind the Y-pipe. Make sure to leave all rubber grommets in the factory location. **You will re-use stock nuts and bolts.** For easier removal of exhaust, cut behind the muffler. Use WD-40 to remove hangers from grommets.



5. Make sure muffler outlets are level before installing tailpipes. Now install passenger tailpipe #C. Insert welded hangers into rubber grommets.



3. Bolt headpipe #A to the stock flange re-using the factory nuts and bolts. Insert welded hanger into rubber grommet. Do not tighten.



6. Now install driver side tailpipe #D. The spare tire may need to be loosened and pushed to the driver side to allow for clearance. Use bolt kit #H to attach both tailpipes together.



2009 Models Only
Measure 8" from the flange on your new headpipe #A and cut. Attach adapter pipe to new headpipe with the 3" clamp. You will re-use the factory band clamp.



7. Using clamps #G secure both tailpipes to the outlets of the muffler. Rotate tailpipes to best fit your truck.



4. Install muffler #B with inlet towards Y-pipe. Use jack stands to support the muffler. Use clamp #F to secure the muffler to headpipe. Do not tighten.



8. INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

GIBSON EXHAUST systems are designed on a factory stock vehicle

Any aftermarket products installed could increase the sound levels of the exhaust.

Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.