



Installation Instructions


Cat-Back DEEGAN 38 Dual Sport Exhaust

Chevy Silverado / GMC Sierra 1500 Truck

Regular Cab, Standard Bed, 4.8L-5.3L 2/4wd

*** Designed specifically for vehicles equipped with Active Fuel Management ***

Part #65653D

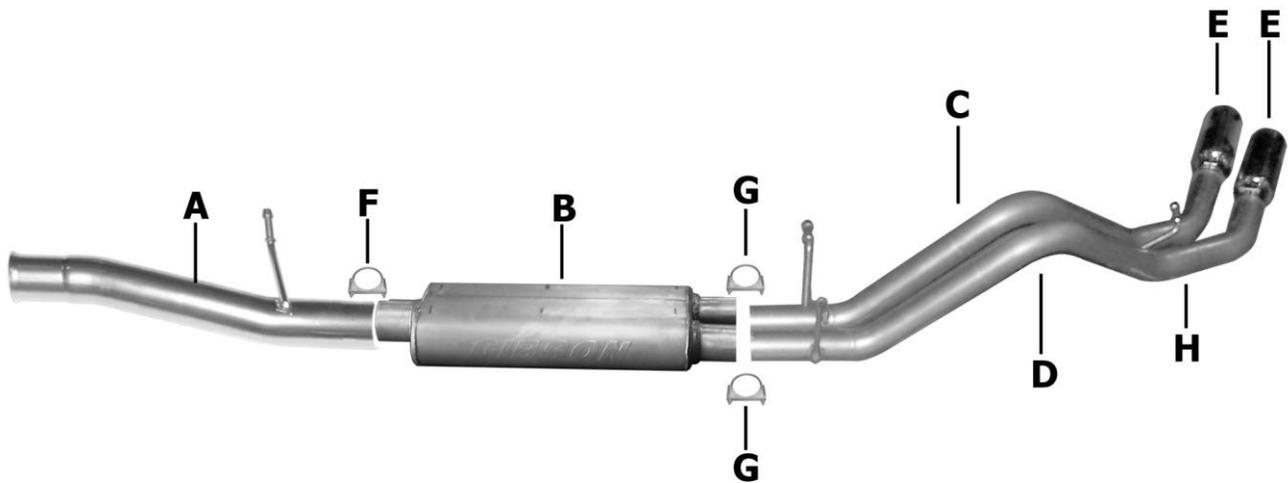

ITEM	PART	QUANTITY	DESCRIPTION
A	999700750S	1	3" Headpipe with Ball Seat Flange
B	11235S	1	Superflow CFT Muffler
C	1227-700984S	1	2.25" Passenger Side Over Axle Tailpipe
D	1228-700985S	1	2.25" Driver Side Over Axle Tailpipe
E	500639-B	2	4" BLACK SS TIP
F	OHD300	1	3" Clamp
G	5756	2	2.25" Clamp
H	BO-906	1	Bolt kit for Tailpipe
I	DE-13	2	DEEGAN 38 BADGE

BOX – 61 X 22 X 13

Thank you for purchasing our Gibson Exhaust System for your vehicle.

If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #65653D

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



unbolt it at the clamp behind the Y-pipe. Make sure to leave all rubber grommets in the factory location. **You will re-use stock nuts and bolts.** For easier removal of exhaust, cut behind the muffler. Use WD-40 to remove hangers from grommets.



5. Make sure muffler outlets are level before installing tailpipes. Now install passenger tailpipe #C. Insert welded hangers into rubber grommets.



3. Install Headpipe # A onto use your factory clamp. Insert hanger into the rubber grommet. Do not tighten the clamp until install is complete.



6. Now install driver side tailpipe #D. The spare tire may need to be loosened and pushed to the driver side to allow for clearance. Use bolt kit #H to attach both tailpipes together.



4. Install muffler #B with inlet towards Y-pipe. Use jack stands to support the muffler. Use clamp #F to secure the muffler to headpipe. Do not tighten.



7. Using clamps #G secure both tailpipes to the outlets of the muffler. Rotate tailpipes to best fit your truck.

8. INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**