




INSTRUCTION MANUAL

CAT-BACK DEEGAN 38 DUAL SPORT STAINLESS EXHAUST

DODGE RAM 2500/3500 5.7L HEMI TRUCK 2/4WD 4DR
QUAD CAB, SHORT & LONG BED
PART # 66401D

DO NOT REMOVE
YOUR STOCK
HEADPIPE

CATALYTIC
CONVERTER

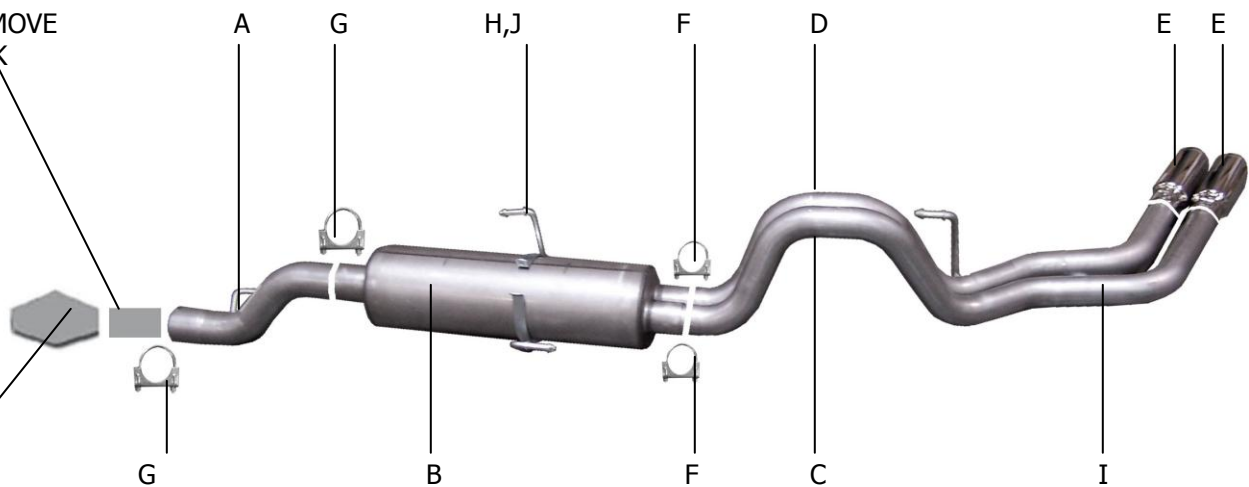

ITEM	PART #	QUANTITY	DESCRIPTION
A	585-700474S	1	3"X23" STAINLESS HEADPIPE EXTENSION
B	789800S	1	STAINLESS SUPERFLOW MUFFLER
C	553-700409S	1	2 ½" STAINLESS DRIVER SIDE TAILPIPE
D	554-700410S	1	2 ½" SS PASS. SIDE TAILPIPE
E	500640-B	2	4" BLACK SS TIP
F	5757	2	2 ½" CLAMP
G	OHD300	2	3" CLAMP
H	4188	1	BAND CLAMP
I	BO-906	2	BOLT KIT FOR TAILPIPE
J	BO-1015	1	BAND CLAMP BOLT KIT
K	DE-13	2	DEEGAN 38 BADGE

MUST REMOVE SPARE TIRE IF LARGER THAN 20"

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 524-3044, Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION KIT#66401D

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS

15MM SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTANDS, HACKSAW, WD-40

TO REMOVE THE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS.



INSTALL DRIVERSIDE TAILPIPE #C INTO MUFFLER. USE CLAMP #F TO SECURE TAILPIPE TO MUFFLER.



INSTALL HEADPIPE #A ONTO YOUR EXISTING STOCK FRONT PIPE AND SECURE WITH CLAMP #G. USE A JACKSTAND TO SUPPORT THE CONVERTER. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE #D INTO MUFFLER AND ATTACH USING CLAMP #F. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. USE BOLT KIT #I TO ATTACH THE TAILPIPES TOGETHER. DO NOT TIGHTEN. DRIVER SIDE TAILPIPE TABS WILL BE ON THE BOTTOM.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #G TO SECURE THE MUFFLER TO THE HEADPIPE. DO NOT TIGHTEN. SLIDE BAND CLAMP #H ONTO THE MUFFLER AND INSERT THE WELDED HANGERS INTO THE RUBBER GROMMETS AND ATTACH WITH BOLT KIT #J.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE AWAY FROM ALL SHOCK BOOTS, BRAKE LINES, FUEL LINES, TIRES, ETC...