




Installation Instructions

Stainless Header and Exhaust Assembly Polaris Ranger Mini RZR 170

Part #98007

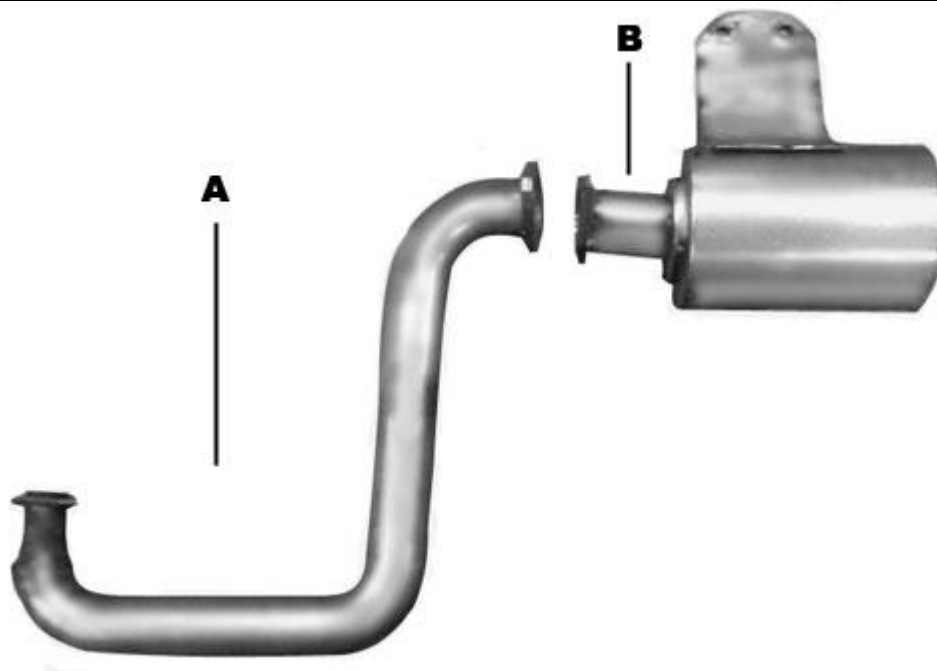

ITEM	PART	QUANTITY	DESCRIPTION
A	RH062	1	Headpipe with 2 two-bolt Flanges
B	RH-19	1	Muffler with Bracket & two-bolt Flange
C	BO-1071	1	Bolt Kit


Thank you for purchasing our Gibson Exhaust System for your vehicle.
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #98007


When installing this exhaust system make sure to use proper safety precautions. Make sure to set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

Note: The factory Exhaust Gasket will be re used in the install of the Gibson Exhaust.

SUGGESTED TOOLS: 15mm,12mm,10mm,wrenches & sockets, WD-40

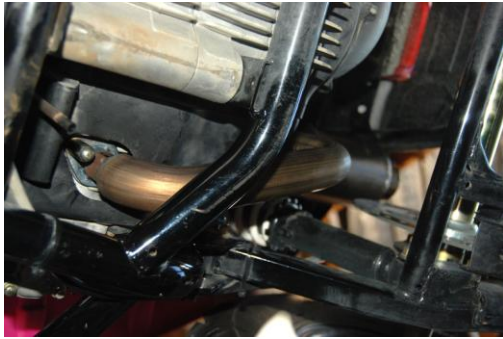

1. Remove your stock exhaust by removing the two bolts holding the muffer on. Do Not discard these bolts. You will re-use them. Next remove the two nuts from the cylinder head. Do Not discard these nuts as you will re-use them also.

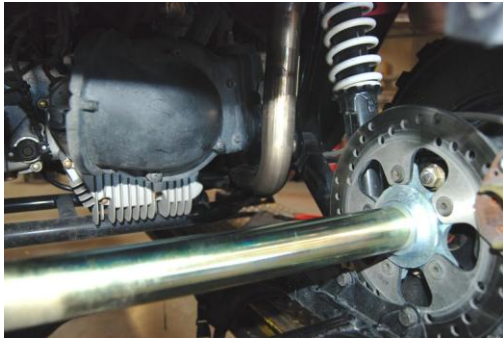

2. Install Headpipe #A using factory nuts. Leave nuts loose.



3. Install muffer #B using factory bolts then attach both pieces together with provided hardware. Tighten all nuts and bolts.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust.

Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to